

Clutch Fluid Level Check

Turn the handlebar to the right side so that the reservoir is level and check the clutch reservoir fluid level through the sight glass.

NOTE:

- When the fluid level is low, check entire system for leaks.

NOTICE

- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

If the level is near the "LOWER" level mark, remove the reservoir cap, set plate and diaphragm, and fill the reservoir with DOT 4 brake fluid from a sealed container to the casting ledge.

Install the diaphragm, set plate and reservoir cap and tighten the cap screws.

Torque: 2 N-m (0.2 kgf-m, 1.4 lbf-ft)

