

Engine Oil Replacement

Warm up the engine.


NOTE:

- Change the oil with engine warm and the motorcycle on its side stand to assure complete and rapid draining.

[Stop the engine and remove the right engine side cover](#)

[Remove the front lower fairing](#)


Remove oil filler cap/dipstick and drain bolt, and drain the oil.

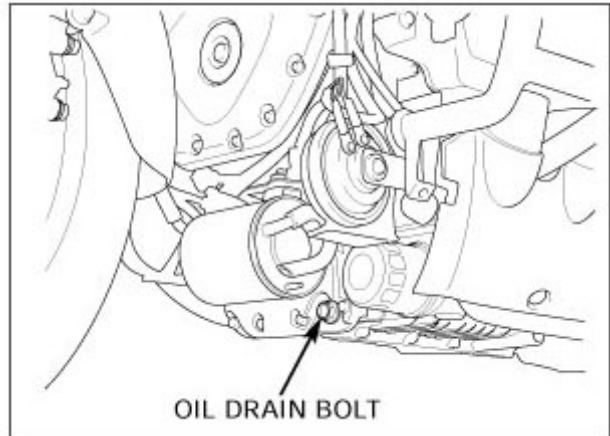

Remove the oil filter cartridge and let the remaining oil drain out.

Tool:

Oil filter wrench 07HAA-PJ70100

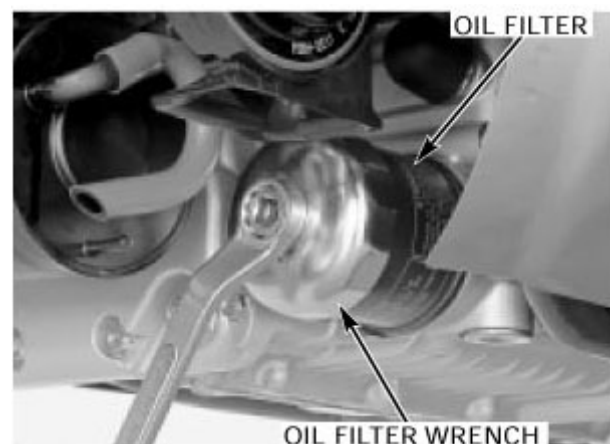

Apply oil to the seal rubber and threads of a new oil filter cartridge and install the filter cartridge.

Tool:

Oil filter wrench 07HAA-PJ70100

Torque: TORQUE: 26 N-m (2.7 kgf-m, 20 lbf-ft)



Install the oil drain bolt with a new sealing washer and tighten it.

Torque: 34 N-m (3.5 kgf-m, 25 lbf-ft)

[Fill the crankcase with the recommended oil.](#)


OIL CAPACITY: 3.6 liters (3.8 US qt, 3.2 Imp qt) at draining

OIL CAPACITY: 3.7 liters (3.9 US qt, 3.3 Imp qt) at filter change

OIL CAPACITY: 4.6 liters (4.9 US qt, 4.0 Imp qt) at disassembly

[Check the engine oil level.](#)

Install the oil filler cap/dipstick.

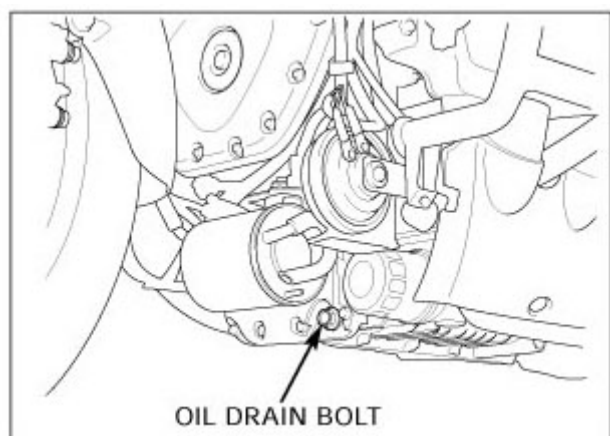

Make sure there are no oil leaks.

[Install the right engine side cover](#)

[Install the front lower cover](#)