

GL1800 Reverse Light Blinks, No Reverse No Cruise

With the ignition turned off, depress the "Reverse" switch. Then turn ignition on. See if the "Reverse" light quits blinking. It should. Then disengage the "Reverse" switch. Turn ignition off. Then turn ignition on and start bike.

Like I said before, don't know what it does other than maybe resets a relay, but it worked for me and others.

Usually when this occurs, at least for me, I also noticed that my Cruise quit working. Would come on but couldn't SET the cruise. This fixed both issues.