

How to program the remote key fob

To program it

1. turn the key on-within 1 to 5 seconds point the remote at the trunk and push the trunk open key, then within 1 to 5 seconds turn off the ignition key.
2. repeat #1
3. repeat #1
4. repeat #1 except this time do not turn off the ignition switch. Hit the button again and it will program itself. Turn the key off and test it.