



# INSTALLATION INSTRUCTIONS

Accessory

**CHROME BAR ENDS**  
P/N 08F69-MCA-100

Application

**GL1800**

Publications No.


**MII 11185**

Issue Date

**July 2005**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

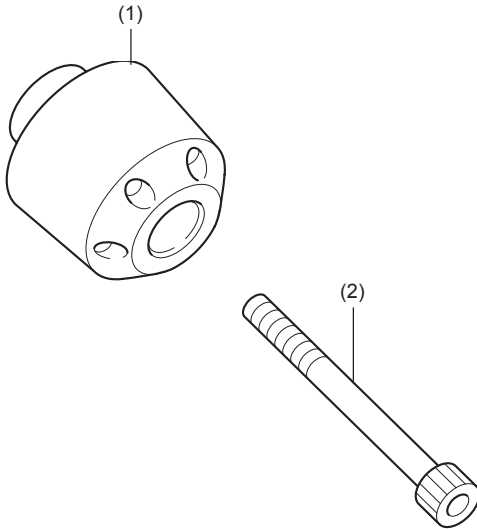

No.	Description	Qty
(1)	Handle weight	2
(2)	6 mm socket bolt	2

## TOOLS AND SUPPLY REQUIRED

Hex wrench (5 mm)

Torque wrench


## TORQUE CHART

Tighten all screws, bolts and nuts to their specified torques. Refer to the Service Manual for the tightening torques of removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm socket bolt	10	1.0	7

## INSTALLATION

1. Remove the grip weights from the handlebar.

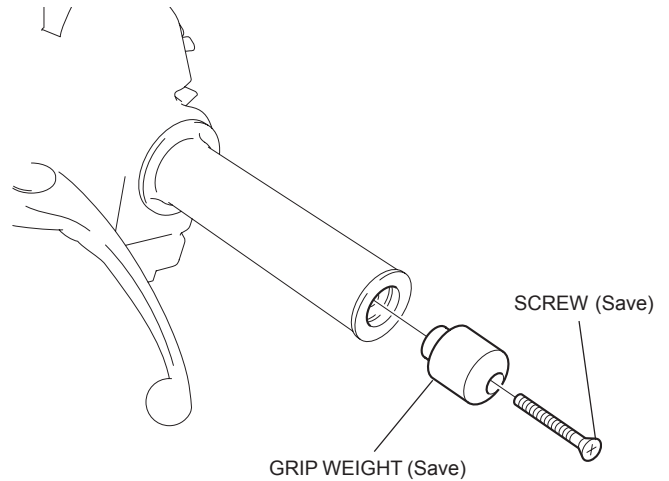

2. Install the chrome bar ends on the handlebar.

